

C6/C690

Manual (3.0E)

References in the manual

WARNING!

This refers to a potentially dangerous situation which may lead to personal injury.

CAUTION!

This refers to a potentially dangerous situation which may lead to damage to the equipment.

IMPORTANT!

This refers to a situation which may cause the equipment to malfunction.

Symbols on the equipment



Please refer to the information in the operating manual.



WARNING!
Dangerous voltage!

General Information

C6/C690 Manual

Version 3.0E, 10/2003, D2077.E.03

© by d&b audiotechnik AG 2003; all rights reserved.

The information contained in this manual has been carefully checked for accuracy, at the time of going to press, however no guarantee is given with respect to the correctness.

d&b audiotechnik AG accepts no responsibility for any errors or inaccuracies that may appear in this manual or the products and software described in it.

Technical specifications, dimensions, weights and properties do not represent guaranteed qualities.

As manufacturers we reserve the right to make alterations and modifications within the framework of legal provisions, as well as changes aimed at improving quality.

d&b audiotechnik AG

Eugen-Adolff-Strasse 134, D-71522 Backnang, Germany

Telephone +49-7191-9669-0, Fax +49-7191-95 00 00

E-mail: docadmin@dbaudio.com, Internet: www.dbaudio.com

Safety precautions

Before you use our products, read the manual carefully and observe all the safety precautions. They will protect you and help to avoid equipment failures.

Keep this manual in a safe place so that it is available for future reference.

If you supply d&b products, please draw the attention of your customers to these safety guidelines. Enclose the relevant manuals with the systems. If you require additional manuals for this purpose, you can order them from d&b.

Information regarding use of loudspeakers

WARNING!

Never stand in the immediate vicinity of loudspeakers driven at a high level. Professional loudspeaker systems are capable of causing a sound pressure level detrimental to human health. Seemingly non-critical sound levels (from approx. 95 dB SPL) can cause hearing damage if people are exposed to it over a long period.

In order to prevent accidents when deploying loudspeakers on the ground or when flown, please take note of the following:

When setting up the loudspeakers or loudspeaker stands, make sure they are standing on a firm surface. If you place several systems on top of one another, use straps to secure them against movement.

Only use accessories which have been tested and approved by d&b for assembly and mobile deployment. Pay attention to the correct application and maximum load capacity of the accessories as detailed in our specific "Mounting instructions" or in our "Flying system and Rigging manuals".

Ensure that all additional hardware, fixings and fasteners used for installation or mobile deployment are of an appropriate size and load safety factor. Pay attention to the manufacturers instructions and to the relevant safety guidelines.


Regularly check the loudspeaker housings and accessories for visible signs of wear and tear, and replace them when necessary.

Regularly check all load bearing bolts in the mounting devices.

CAUTION!

Loudspeakers produce a static magnetic field even if they are not connected or are not in use. Therefore make sure when erecting and transporting loudspeakers that they are nowhere near equipment and objects which may be impaired or damaged by an external magnetic field. Generally speaking, a distance of 0.5 m (1.5 ft) from magnetic data carriers (floppy disks, audio and video tapes, bank cards, etc.) is sufficient; a distance of more than 1 m (3 ft) may be necessary with computer and video monitors.

C6

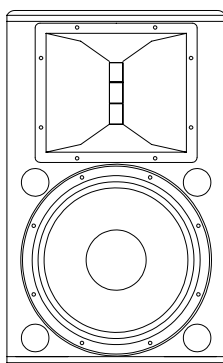

The C6 loudspeaker is a full range, two-way bass-reflex enclosure fitted with a 12" LF driver passively connected to a 2" HF compression driver which is coupled to a 60° x 40° CD horn.

The C6 cabinet is constructed from marine plywood and has an impact resistant paint finish. The front of the loudspeaker cabinet is fitted with a rigid metal grill covered with a replaceable acoustically transparent foam. The cabinet top plate has an integral handle and four M10 threaded inserts for mounting brackets and rigging. The L shaped metal plate at the bottom of the cabinet also incorporates a handle, four M10 threaded inserts and a socket to accept a loudspeaker stand.


Version C690

The C690 has a wider horizontal and vertical dispersion than the C6, the only difference being the 90° x 50° CD horn.

CAUTION!

Only operate C6/C690 cabinets with a d&b D12 or E-PAC amplifier in C6 mode or a P1200A mainframe fitted with a C6 controller module, otherwise there is a risk of damaging the loudspeaker components.

Connections

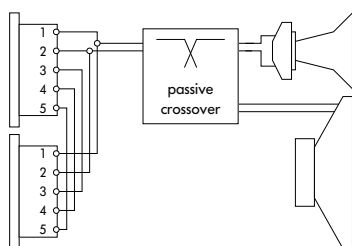

Connector wiring

The C6/C690 cabinets are fitted with a pair of EP5 connectors. All pins of both connectors are wired in parallel. The C6 uses the pin assignments 1/2. Pins 3/4 and 5 are designated to d&b active subwoofers.

Using one connector as the input, the second connector allows for direct connection to additional cabinets.

The C6/C690 can be supplied with NL4 output connectors as an option using the pin assignment 1+/1-. Pins 2+/2- are designated to d&b active subwoofers.

Pin equivalents of EP5 and NL4 connectors are listed in the table below.

EP5	1	2	3	4	5 (SenseDrive SUB)
NL4	1+	1-	2+	2-	n.c.

EP5 and NL4 pin assignments

Operation with D12

Selecting C6 mode in the D12 enables up to two C6/C690 cabinets to be driven by each channel. In applications with low continuous levels and low ambient temperatures up to three cabinets per channel may be connected.

When the D12 is operated in "Mix TOP/SUB" mode the C6/C690 cabinet and a respective active subwoofer can be linked together locally and fed by a single 4-wire cable from either amplifier output connector.

To apply SenseDrive for the subwoofer, EP5 connectors and 5-wire cables have to be used. When operated in "Mix TOP/SUB" mode the subwoofer has to be fed from the output B connector of the D12 amplifier.

IMPORTANT!

Controller settings

For acoustic adjustment the settings CUT, HFA and CPL can be selected.


CUT

Set to CUT, a high pass filter with a 110 Hz cut off frequency is inserted in the controller signal path. The C6/C690 is now configured for use with d&b active subwoofers.


HFA circuit

In HFA mode (High Frequency Attenuation), the HF response of the C6/C690 is rolled off. The HFA provides a natural, balanced frequency response when a unit is placed close to listeners in near field or delay use.

High Frequency Attenuation begins gradually at 1 kHz, dropping by approximately 3 dB at 10 kHz. This roll off mimics the decline in frequency response experienced when listening to a system from a distance in a typically reverberant room or auditorium.

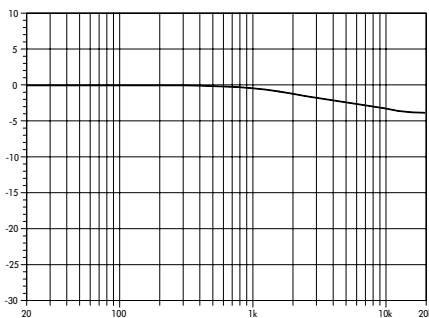


Frequency response of HFA circuit

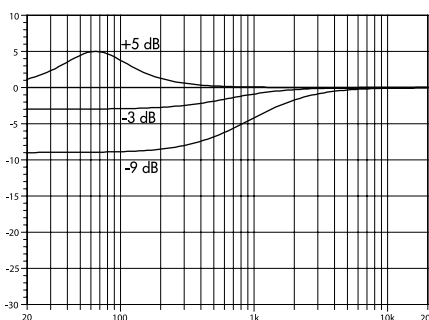


Frequency response of CPL circuit

CPL circuit

The CPL (Coupling) circuit compensates for coupling effects between the cabinets when building closely coupled arrays. CPL begins gradually at 1 kHz, with maximum attenuation below 250 Hz, providing a balanced frequency response when C6/C690 cabinets are used in arrays of two or more. The function of the CPL circuit in the D12 amplifier is shown in the diagram opposite and can be set in dB attenuation values between -9 and 0, or a positive CPL value which creates an adjustable low frequency boost around 65 Hz (0 to +5 dB).

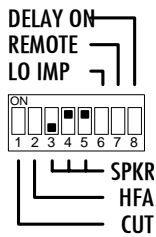

E-PAC Configuration for C6 (E-PAC version 2)

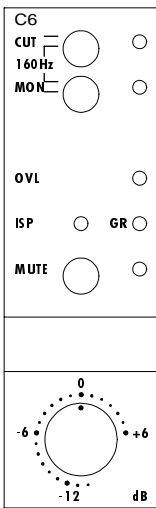

Controls on C6 controller module

Operation with E-PAC

To drive C6/C690 cabinets the E-PAC has to be configured to C6 mode.

For an E-PAC version 2, the configuration is selected by setting the appropriate DIP switches on the rear panel.

For an E-PAC version 3, the configuration is set via the encoder in conjunction with the LCD. Selecting C6 mode enables one C6/C690 cabinet to be driven at an output power of 300 Watts. LO IMP mode allows the E-PAC to drive two C6/C690 cabinets with a 6 dB reduction of input level to the loudspeakers.

The CUT and HFA settings are available. The characteristics of the CUT and HFA settings are explained under the previous section "Operation with D12 - Controller settings".

The settings MON and 160 Hz are not available with the E-PAC.

Operation with P1200A

Up to two C6/C690 cabinets can be driven by each P1200A power amplifier channel fitted with a C6 controller module.

Fitting one C6 and one subwoofer controller module allows a single mainframe to drive two C6/C690 and two active subwoofer cabinets. All cabinets can be linked together locally and fed by a single 4-wire cable from either mainframe output connector.

The CUT, MON and 160 Hz settings are available. The characteristics of the CUT setting is explained under the previous section "Operation with D12 - Controller settings".

MON switch and indicator


If the MON switch is selected the low frequency level is reduced by 3 dB. This setting reduces the low frequency energy gained from the coupling effect of floor placement.

160 Hz setting (CUT and MON switches both selected)


If the 160 Hz mode is selected, a high pass filter is inserted in the controller signal path. The crossover frequency of 160 Hz is higher than in CUT mode and thus increases the available headroom in the C6/C690. The 160 Hz setting can be selected when the C6/C690 is operated with a d&b subwoofer.

Dispersion characteristics

The diagrams below show dispersion angle vs frequency plotted using lines of equal sound pressure (isobars) at -6 dB and -12 dB. The nominal 60° horizontal dispersion is maintained from 20 kHz down to 2 kHz.

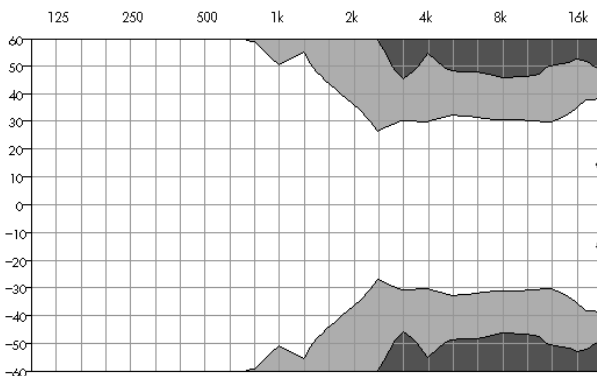

horizontal
C6 isobar diagrams

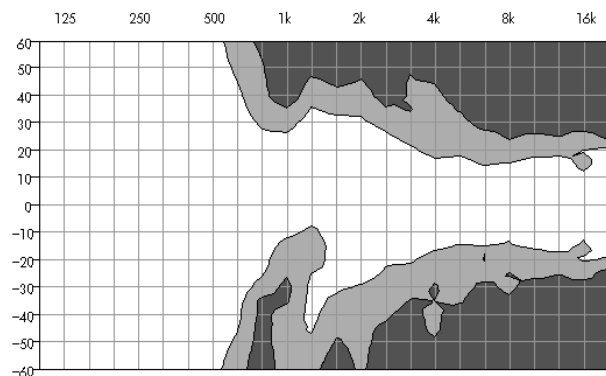

vertical


Technical specifications

C6 (C690) system data


Frequency response (-5 dB).....	70 Hz - 17 kHz
Max. sound pressure (1 m, free field) with D12.....	134 (133) dB
Max. sound pressure (1 m, free field) with E-PAC.....	131 (130) dB
Max. sound pressure (1 m, free field) with P1200A.....	133 (132) dB
(SPLmax peak, pink noise test signal with crest factor of 4)	
Input level (100 dB SPL / 1 m).....	-14 (-13) dBu
Polarity to controller INPUT (XLR pin 2: + / 3: -).....	LF: + / HF: -

C6 (C690) loudspeaker


Nominal impedance.....	8 ohms
Power handling capacity (RMS / peak 10 ms).....	200 / 800 W
Nominal dispersion angle (hor. x vert.).....	60° x 40° (90° x 50°)
Connections.....	2 x EP5
Pin assignments.....	1/2
optional.....	2 x NL4
Pin assignments.....	1+ / 1-
Weight.....	28 kg (62 lb)

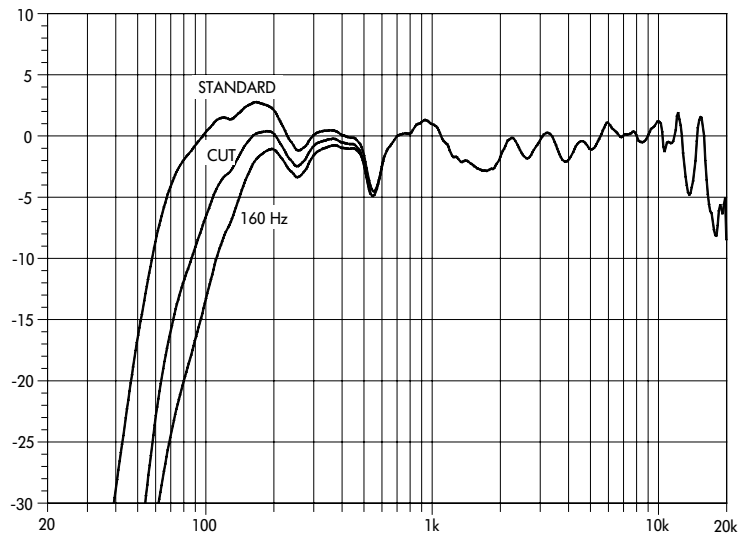

C6 frequency response, standard, CUT and 160 Hz switch settings

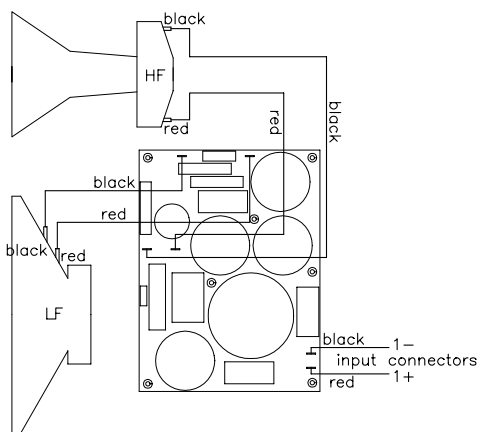

C6/C690 wiring diagram

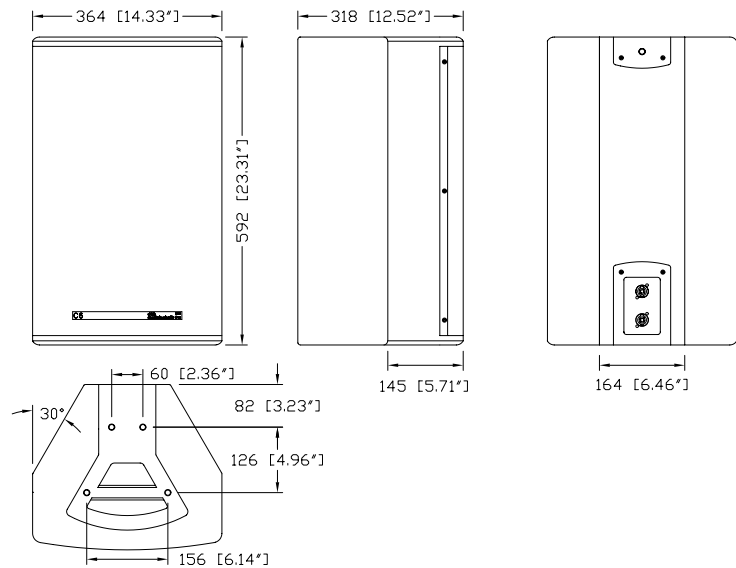

C6/C690 cabinet dimensions in mm [inch]

EU declaration of conformity (CE symbol)



EU conformity of loudspeakers

This declaration applies to loudspeakers manufactured by d&b audiotechnik AG and includes the types listed in the table below:

- **C6/C690 Z2252**

All production versions of these types are included, provided they correspond to the original technical version and have not been subject to any later design or electromechanical modifications.

We herewith declare that said products are in conformity with the provisions of the following EC directives including all applicable amendments:

- **89/336 Electromagnetic Compatibility**

The following standards have been applied:

- **DIN EN 55013:08-1991**
- **DIN EN 55020:05-1995**
- **DIN EN 50082-1:03-1993**